



#### PHONES

(044) 360-7-130  
 (050) 336-0-130  
 (063) 788-0-130  
 (067) 233-0-130  
 (068) 282-0-130

# 130

COM.UA

## Internet store of autogoods



#### ICQ

294-0-130  
 597-0-130

SKYPE  
 km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |  
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |  
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<http://130.com.ua>

FOR CAR USE ONLY/NUR FÜR AUTOMOBIL GEBRAUCH/POUR APPLICATION AUTOMOBILE UNIQUEMENT/PARA USO EN AUTOMÓVILES/SOLO PER L'UTILIZZO IN AUTOMOBILE/ENDAST FÖR BILBRUK/ALLEEN VOOR GEBRUIK IN DE AUTO/ТОЛЬКО ДЛЯ ИСПОЛЬЗОВАНИЯ В АВТОМОБИЛЯХ/DO UŻYCIA TYLKO W SAMOCHODZIE/ΓΙΑ ΧΡΗΣΗ ΜΟΝΟ ΣΕ ΑΥΤΟΚΙΝΗΤΟ



## Mobile Media Station IVE-W530BT



- **OWNER'S MANUAL**  
Please read before using this equipment.
- **BEDIENUNGSANLEITUNG**  
Lesen Sie diese Bedienungsanleitung bitte vor Gebrauch des Gerätes.
- **MODE D'EMPLOI**  
Veuillez lire avant d'utiliser cet appareil.
- **MANUAL DE OPERACIÓN**  
Léalo antes de utilizar este equipo.
- **ISTRUZIONI PER L'USO**  
Si prega di leggere prima di utilizzare il attrezzatura.
- **ANVÄNDARHANDLEDNING**  
Innan du använder utrustningen bör du läsa igenom denna användarhandledning.
- **GEBRUIKERSHANDLEIDING**  
Lees deze aanwijzingen aandachtig alvorens dit toestel te gebruiken.
- **РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ**  
Прочтите настоящее руководство перед началом использования оборудования.
- **INSTRUKCJA OBSŁUGI**  
Prosimy zapoznać się z tą instrukcją przed przystąpieniem do użytkowania urządzenia.
- **ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ**  
Παρακαλούμε διαβάστε το πριν χρησιμοποιήσετε τη συσκευή.

**ALPINE ELECTRONICS MARKETING, INC.**  
1-7, Yukigaya-Otsukamachi, Ota-ku,  
Tokyo 145-0067, JAPAN  
Phone: 03-5499-4531

**ALPINE ELECTRONICS OF AMERICA, INC.**  
19145 Gramercy Place, Torrance,  
California 90501, U.S.A.  
Phone 1-800-ALPINE-1 (1-800-257-4631)

**ALPINE ELECTRONICS OF CANADA, INC.**  
777 Supertest Road, Toronto,  
Ontario M3J 2M9, Canada  
Phone 1-800-ALPINE-1 (1-800-257-4631)

**ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.**  
161-165 Princes Highway, Hallam  
Victoria 3803, Australia  
Phone 03-8787-1200

**ALPINE ELECTRONICS GmbH**  
Wilhelm-Wagenfeld-Str. 1-3, 80807 München, Germany  
Phone 089-32 42 640

**ALPINE ELECTRONICS OF U.K. LTD.**  
Alpine House  
Fletchamstead Highway, Coventry CV4 9TW, U.K.  
Phone 0870-33 33 763

**ALPINE ELECTRONICS FRANCE S.A.R.L.**  
(RCS PONTOISE B 338 101 280)  
98, Rue de la Belle Etoile, Z.I. Paris Nord II,  
B.P. 50016, 95945 Roissy Charles de Gaulle  
Cedex, France  
Phone 01-48638989

**ALPINE ITALIA S.p.A.**  
Viale C. Colombo 8, 20090 Trezzano  
Sul Naviglio (MI), Italy  
Phone 02-484781

**ALPINE ELECTRONICS DE ESPAÑA, S.A.**  
Portal de Gamarra 36, Pabellón, 32  
01013 Vitoria (Alava)-APDO 133, Spain  
Phone 945-283588

**ALPINE ELECTRONICS (BENELUX) GmbH**  
Leuvensesteenweg 510-B6,  
1930 Zaventem, Belgium  
Phone 02-725-13 15

EN

DE

FR

ES

IT

SE

NL

RU

PL

GR

130.com.ua

# Contents

## Operating Instructions

### WARNING

<b>WARNING</b> .....	<b>6</b>
<b>CAUTION</b> .....	<b>6</b>
<b>PRECAUTIONS</b> .....	<b>7</b>
<b>Discs Playable on This Unit</b> .....	<b>8</b>

### Getting Started

Accessory List .....	12
Location of Controls .....	12
Turning Power On or Off .....	13
Adjusting the Volume .....	13
Lowering Volume Quickly .....	13
How to view the Display .....	13
TOUCH PANEL operation .....	13
Recalling the Source .....	13
Displaying the Numeric Keypad Input Screen .....	14

### Radio

Listening to the Radio .....	15
Presetting Stations Manually .....	15
Presetting Stations Automatically .....	15
Tuning to Preset Stations .....	15

### RDS Operation

Turning AF (Alternative Frequencies) On or Off .....	16
Receiving Traffic Information .....	16
PTY (Programme Type) Tuning .....	16
Receiving Traffic Information While Playing CD or Radio .....	17
Priority News .....	17
Displaying Radio Text .....	17

### CD/MP3/WMA/AAC

Playback .....	18
Repeat Play .....	18
M.I.X. (Random Play) .....	19
Selecting Folders (concerning MP3/WMA/AAC) .....	19

About MP3/WMA/AAC .....	19
-------------------------	----

### DVD

Playing a Disc .....	21
To display the DVD mode screen .....	21
If a menu screen appears .....	22
Displaying the Top Menu Screen .....	23
Displaying the Menu Screen .....	23
Displaying the Menu Operation Mode Screen .....	23
Numeric Keypad Input Operation .....	23
Select a Track/File/Chapter .....	23
Select a Folder/Title .....	23
Stopping Playback (Pre Stop) .....	24
Stopping Playback .....	24
Fast-forwarding/Fast-reversing .....	24
Finding the Beginnings of Chapters/Files .....	24
Playing Still Frames (Pausing) .....	24
Slow Motion Playback .....	24
Selecting Folders .....	25
Repeat Playback .....	25
Searching by Title/Folder Number .....	25
Searching Directly by Chapter, File Number .....	25
Switching the Angle .....	26
Switching the Audio Tracks .....	26
Switching the Subtitles (Subtitle Language) .....	26
Switching from the disc menu .....	26
About DivX .....	27

### Other Useful Features

Adjusting the Audio .....	27
Search Function .....	29
Rear Selection Function .....	29
Switching Display Modes .....	30
Switching the Visual Source Only (Simultaneous Function) .....	30
Cancelling the Simultaneous Function .....	30
Blackout Mode On and Off .....	30

## Setup

### DVD Setup

DVD Setup Operation .....	31
Changing the language setting .....	31
Setting of the Menu Language .....	31
Setting of the Audio Language .....	31
Setting of the Subtitle Language .....	32
Setting the Downmix Mode .....	32
Setting the TV Screen .....	32
Setting the DOLBY Dynamic Range .....	32
Displaying DivX® Disc Information .....	32

### Source Setup

Source Setup Operation .....	33
Radio Setup .....	33

### Display Setup

Display Setup Operation .....	34
Setting the Brightness of the Backlighting .....	34
Adjusting the Minimum Level of Backlight .....	34
Turn the Function Guide ON/OFF (Function Guide Fade) .....	35
Switching the Font Background Colour .....	35
Adjusting the Touch Panel .....	35
Setting the VISUAL Button .....	35

### Visual EQ™

Visual EQ Setting Operation .....	35
Selecting the Visual EQ Mode (Factory's setting) .....	36
Adjusting Brightness .....	36
Adjusting Colour of Picture .....	36
Adjusting Tint of Picture .....	36
Adjusting Image Contrast .....	36
Adjusting Picture Quality .....	36
Storing Visual EQ .....	36

### General Setup

General Setup Operation .....	37
Displaying the Time .....	37
Setting the Clock Display .....	37
Setting the Time .....	37
Setting Summer Time .....	37
Demonstration Function .....	37
Sound (Beep) Guide Function .....	37
Setting the Beep Level .....	38
Setting the Scroll .....	38
Changing the Russian Font .....	38
Adjusting the Dimmer of Button Lighting at Night .....	38

Setting Security code .....	38
-----------------------------	----

### System Setup

System Setup Operation .....	39
Setting the Rear Camera Input .....	39
Setting the Navigation Mode .....	40
Setting the Navigation Interruption .....	40
Setting the AUX Mode .....	40
Setting the AUX Front Mode .....	41
Setting the Picture/Sound Output .....	41
Setting the BLUETOOTH Connection (BLUETOOTH IN) .....	41
Changing the Lighting Colour of Buttons .....	41

## BT Hands Free Calling

Setup Before Using .....	42
About BLUETOOTH .....	42
Before Using Hands-Free Function .....	42
How to connect to a BLUETOOTH compatible device (Pairing) .....	42
BLUETOOTH Setup .....	43
BLUETOOTH Setup Operation .....	43
Hands-Free Phone Control .....	44
About the Hands-Free Phone .....	44
Answering a Call .....	45
Hanging up the Telephone .....	45
Adjusting the volume when receiving a Call .....	45
Redial Function .....	45
Call waiting function .....	45
Call Switching Operation .....	46
Call History .....	46
Redialing a Number in Dialed Calls History .....	46
Dialing a Number in Received Calls History .....	46
Dialing a Number in Missed Calls History .....	46
Dialing a Number In the Phone Book (Phone Book) .....	47
Dialing a Number Using Direct Dial Input .....	48
Voice Dial Operation .....	48
BLUETOOTH Audio Function .....	48
BLUETOOTH Audio Operation .....	48

## Rearview Camera Operation (Optional)

Switching the Rear Camera Screen (Optional) .....	49
---	----

Displaying the rear view video while the car is in reverse .....	49
Displaying the rear view video manually .....	49

## **Navigation System (Optional)**

Switching the Navigation Screen (Optional) .....	49
---	----

## **Auxiliary Device (Optional)**

Operating Auxiliary Devices (Optional) .....	50
--	----

## **TUE-T200DVB Operation (Optional)**

Operating the TUE-T200DVB (Optional) .....	50
--	----

## **USB Memory (Optional)**

BANK Function .....	51
Playback .....	52
Repeat Play .....	52
Random Play Shuffle (M.I.X.) .....	52
Searching for a desired Song .....	53
Searching by Playlist name .....	53
Selecting the desired Playlist .....	53
Select the desired Folder (Folder up/down) .....	53

## **iPod/iPhone (Optional)**

Connecting an iPod/iPhone .....	54
Setting the iPod Control .....	54
Playback .....	54
Searching for a desired Song .....	55
Searching by artist name .....	55
Selecting Playlist/Artist/Album/Genre/ Composer/Episode/Category .....	55
Random Play Shuffle (M.I.X.) .....	56
Repeat Play .....	56

## **Information**

About DVDs .....	56
List of Language Codes .....	57
In Case of Difficulty .....	58
Specifications .....	62

# **Installation and Connections**

<b>Warning</b> .....	<b>63</b>
----------------------	-----------

<b>Caution</b> .....	<b>63</b>
----------------------	-----------

<b>Precautions</b> .....	<b>63</b>
--------------------------	-----------

Installation .....	64
--------------------	----

Mounting the Microphone .....	65
-------------------------------	----

Connections .....	67
-------------------	----

System Example .....	69
----------------------	----



# Operating Instructions

## WARNING



### WARNING

**This symbol means important instructions. Failure to heed them can result in serious injury or death.**

#### **INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE EMERGENCY BRAKE IS APPLIED.**

It is dangerous for the driver to watch TV/Video while driving a vehicle. Installing this product incorrectly enables the driver to watch TV/Video while driving. This may cause a distraction, preventing the driver from looking ahead, thus causing an accident. The driver or other people could be severely injured.

#### **DO NOT WATCH VIDEO WHILE DRIVING.**

Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

#### **DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.**

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

#### **KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.**

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

#### **MINIMIZE DISPLAY VIEWING WHILE DRIVING.**

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

#### **DO NOT DISASSEMBLE OR ALTER.**

Doing so may result in an accident, fire or electric shock.

#### **USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.**

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

#### **KEEP SMALL OBJECTS SUCH AS BOLTS OR SCREWS OUT OF THE REACH OF CHILDREN.**

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

#### **USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.**

Failure to do so may result in fire or electric shock.

#### **DO NOT BLOCK VENTS OR RADIATOR PANELS.**

Doing so may cause heat to build up inside and may result in fire.

#### **USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.**

Use for other than its designed application may result in fire, electric shock or other injury.

#### **DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.**

Doing so may result in personal injury or damage to the product.



### CAUTION

**This symbol means important instructions. Failure to heed them can result in injury or material property damage.**

#### **HALT USE IMMEDIATELY IF A PROBLEM APPEARS.**

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing.

# PRECAUTIONS

## Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

## Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

## Moisture Condensation

You may notice the disc playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

## Damaged Disc

Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.

## Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

## Never Attempt the Following

Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism.

Do not attempt to insert a disc into the unit when the unit power is off.



## Inserting Discs

Your player accepts only one disc at a time for playback. Do not attempt to load more than one disc.

Make sure the label side is facing up when you insert the disc. "Disc Error" will be displayed on your player if you insert a disc incorrectly.

Playing a disc while driving on a very bumpy road may result in skips, but this will not scratch the disc or damage the player.

## Irregular Shaped Discs


Be sure to use round shaped discs only for this unit and never use any special shaped discs.

Use of special shaped discs may cause damage to the mechanism.



## New Discs

To prevent the CD from jamming, "Disc Error" is displayed if discs with irregular surfaces are inserted or if discs are inserted incorrectly. When a new disc is ejected immediately after initial loading, use your finger to feel around the inside of the centre hole and outside edge of the disc. If you feel any small bumps or irregularities, this could inhibit proper loading of the disc. To remove the bumps, rub the inside edge of the hole and outside edge of the disc with a ballpoint pen or other such instrument, then insert the disc again.

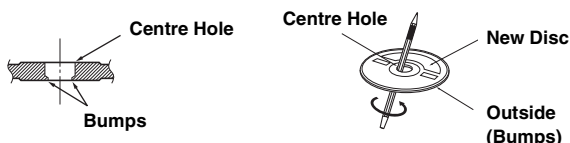


## Installation Location

Make sure the IVE-W530BT will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations

## Correct Handling

Do not drop the disc while handling. Hold the disc so you will not leave fingerprints on the surface. Do not affix tape, paper, or gummed labels to the disc. Do not write on the disc.

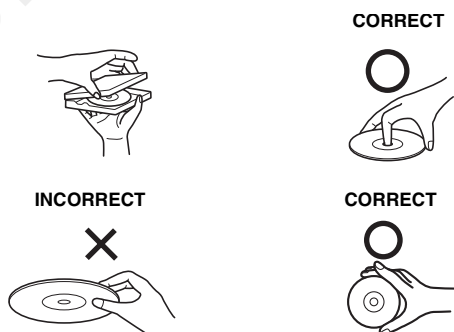

## Disc Cleaning

Fingerprints, dust, or soil on the surface of the disc could cause the DVD player to skip. For routine cleaning, wipe the playing surface with a clean, soft cloth from the centre of the disc to the outer edge. If the surface is heavily soiled, dampen a clean, soft cloth in a solution of mild neutral detergent before cleaning the disc.






## Disc Accessories

There are various accessories available on the market for protecting the disc surface and improving sound quality. However, most of them will influence the thickness and/or diameter of the disc. Using such accessories can cause the disc to be out of standard specifications and may create operational problems. We recommend not using these accessories on discs played in Alpine DVD players.



Transparent Sheet



Disc Stabilizer

## Handling the Detachable Front Panel

- Do not expose to rain or water.
  - Do not drop or subject to shock.
- 
- After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.
  - In cold temperature conditions, the screen may lose contrast temporarily. After a short warm-up period, it will return to normal.

Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked. This ensures the focus of the driver's attention will be on the road and not on the IVE-W530BT. This has been done for the safety of the driver and passengers. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. The warning "Can't operate while driving", will be displayed if any attempts are made to perform these operations while driving.

- The IVE-W530BT draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the IVE-W530BT is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the OFF position when you leave the vehicle. Turn the SPST switch back ON before using the IVE-W530BT. For connecting the SPST switch, refer to the "Connection Diagram of SPST Switch (Sold Separately)" (page 66). If the power (ignition) lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time.

## Discs Playable on This Unit

### Playable discs

The discs listed below can be played on this unit.

	Mark (logo)	Recorded content	Disc size
DVD Video		Audio + Video	12 cm*
Music CD		Audio	12 cm
DivX®		Audio + Video	12 cm

\* Two-layer DVD disc compatible

The formatted discs listed below can be played on this unit.

	CD-R/ CD-RW	DVD-R/ DVD-RW	DVD+R/ DVD+RW
CD Format	<input type="radio"/>		
MP3 Format ("mp3")	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
WMA Format ("wma")	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
AAC Format ("mp4", "m4a")	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
DVD Video Format		<input type="radio"/>	<input type="radio"/>
DivX Format ("avi", "div", "divx")	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Discs that are not finalised cannot be played back

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua

130.com.ua



130.com.ua

130.com.ua

130.com.ua

130.com.ua